



**Installation /
Conversion
to
CARGRAPHIC
Sport Tailpipes**

**For
BMW X5 G05 Petrol**

Disclaimer:

The contents listed in these manual / installation instructions were created with great care.
CARGRAPHIC Thomas Schnarr GmbH does not guarantee for completeness, actuality and correctness of the listed content.
The use of the contents is therefore at the sole risk of the respective user.
Therefore we - **CARGRAPHIC Thomas Schnarr GmbH** - do not assume any liability and responsibility for damages resulting from the operation or wrong handling and maintenance or in any way related to it.

Notes:

The conversion is only possible on vehicles with **M** package.
The installation should be done by a specialist workshop!



Consisting of:


- CARGRAPHIC Tailpipe adapter set R / L with bracket
- 4x CARGRAPHIC Sport Tailpipes with brackets
- 1x CARGRAPHIC Adapter for retrofitting to original tailpipe covers




Step 1:
Please remove the rear diffusor.

Step 2:
Remove the tailpipe covers including the retaining frame.
On the picture you can see the screws which must be removed.




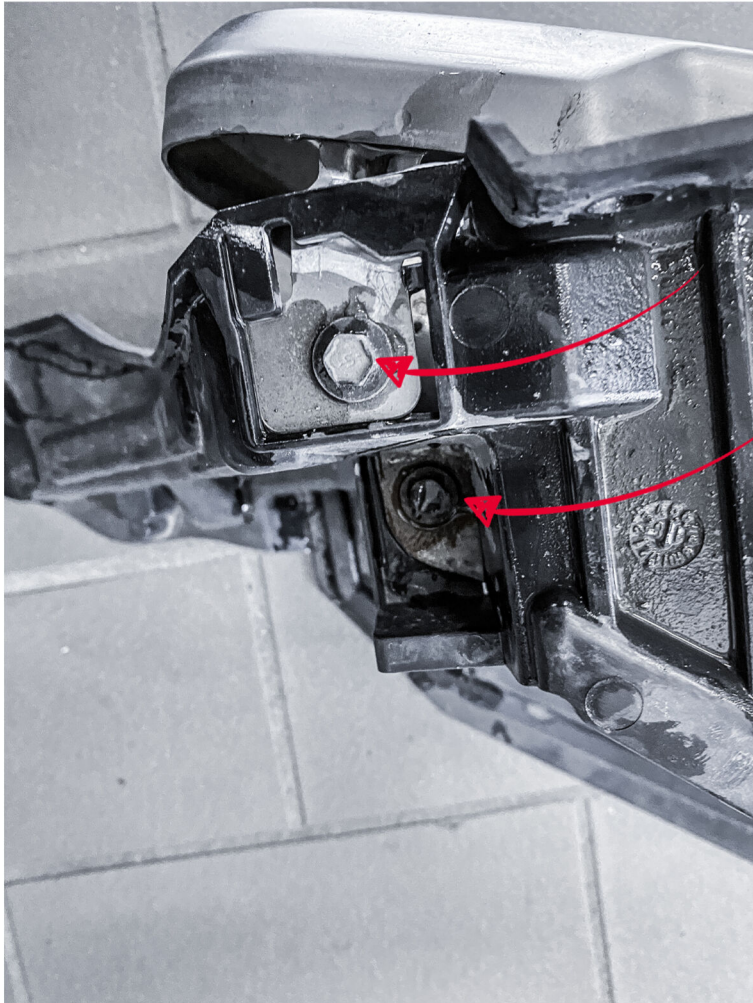

Step 3:
Separate the retaining frame from the tailpipe cover
by removing the two screws.
Then reinstall the retaining frame onto the vehicle.

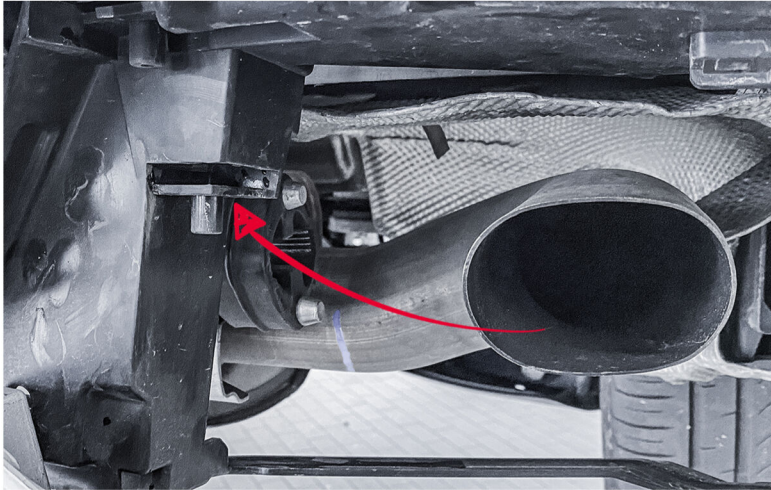

Step 4:
Cut off as shown the piece from the tailpipe cover retaining frame.

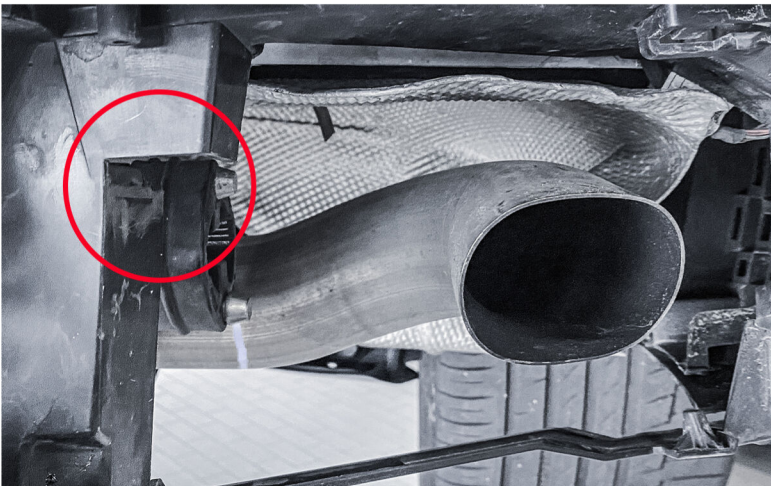

**In this picture you can see the retaining frame
after the piece has been cut off.**

Step 5:
Cut off the original tailpipes at the rear silencer.

**Please check with our tailpipe adapters the distance
before you cut the pipes.**





Step 6:
Align the right CARGRAPHIC tailpipe adapter together with the tailpipes and weld it to the original silencer.

Step 7:

**Place the left tailpipe adapter on the rear silencer and align the tailpipes accordingly.
After that, tighten all clamps.**



Original



Cargraphic

